

FIG.1(a)

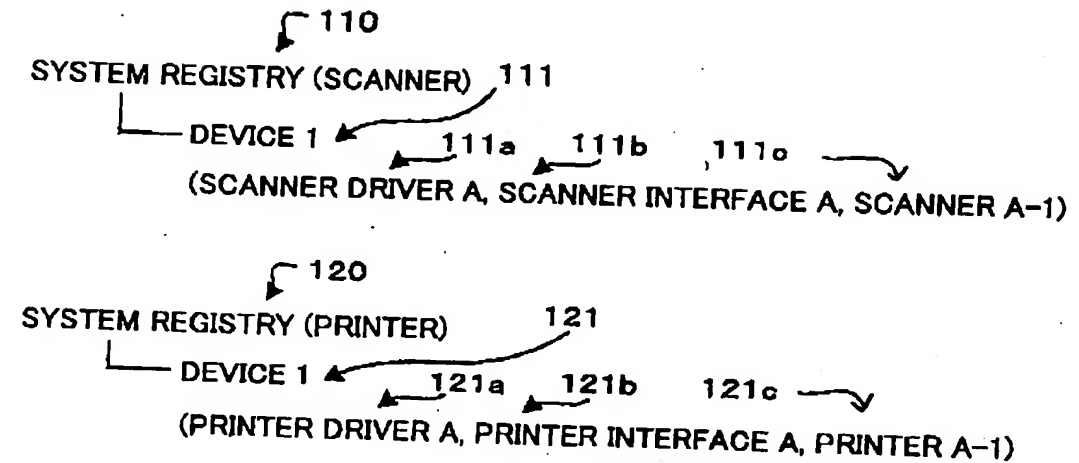


FIG.1(b)

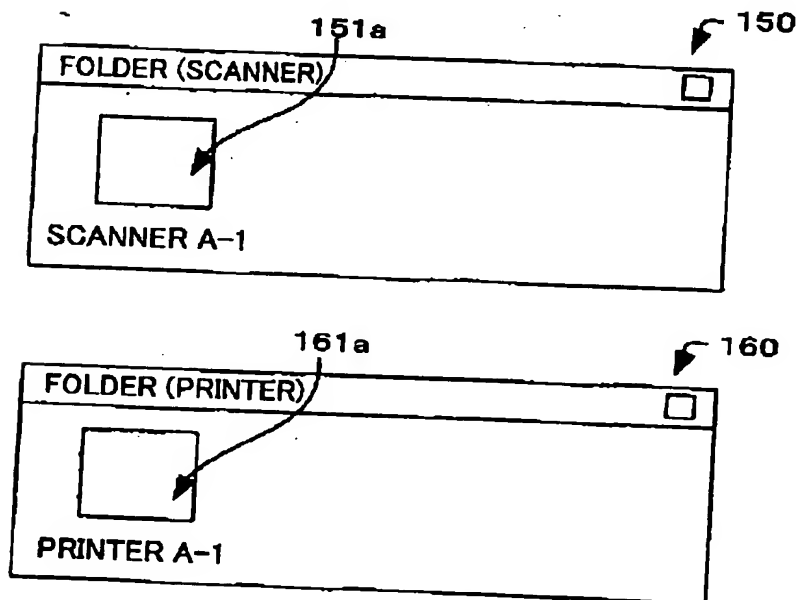


FIG.2(a)

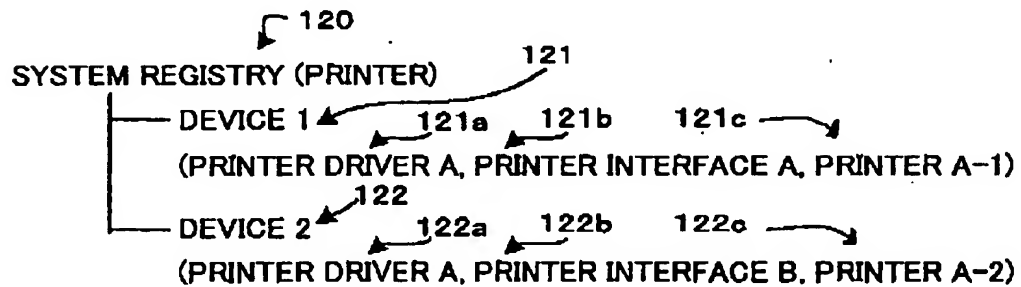
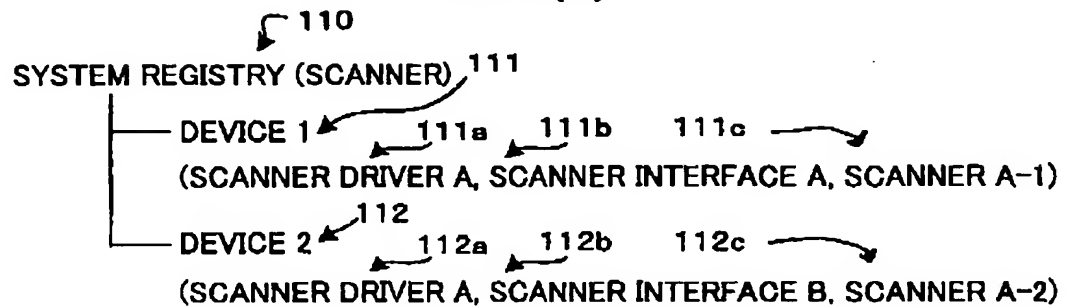


FIG.2(b)


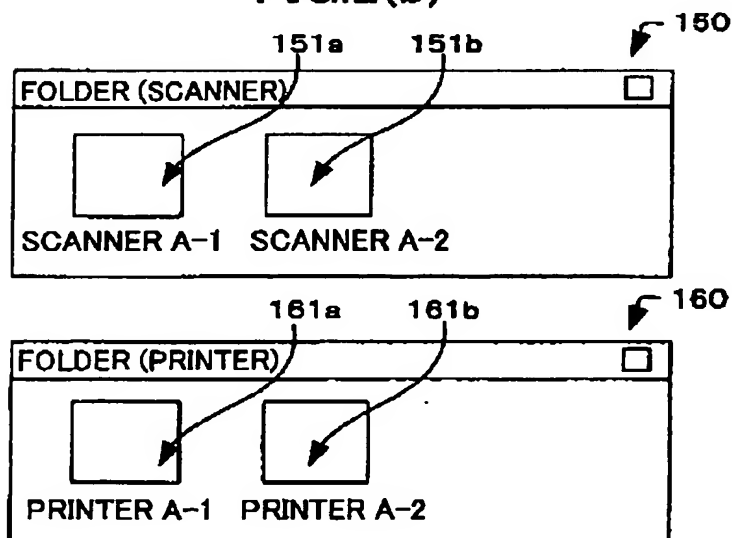


FIG.3

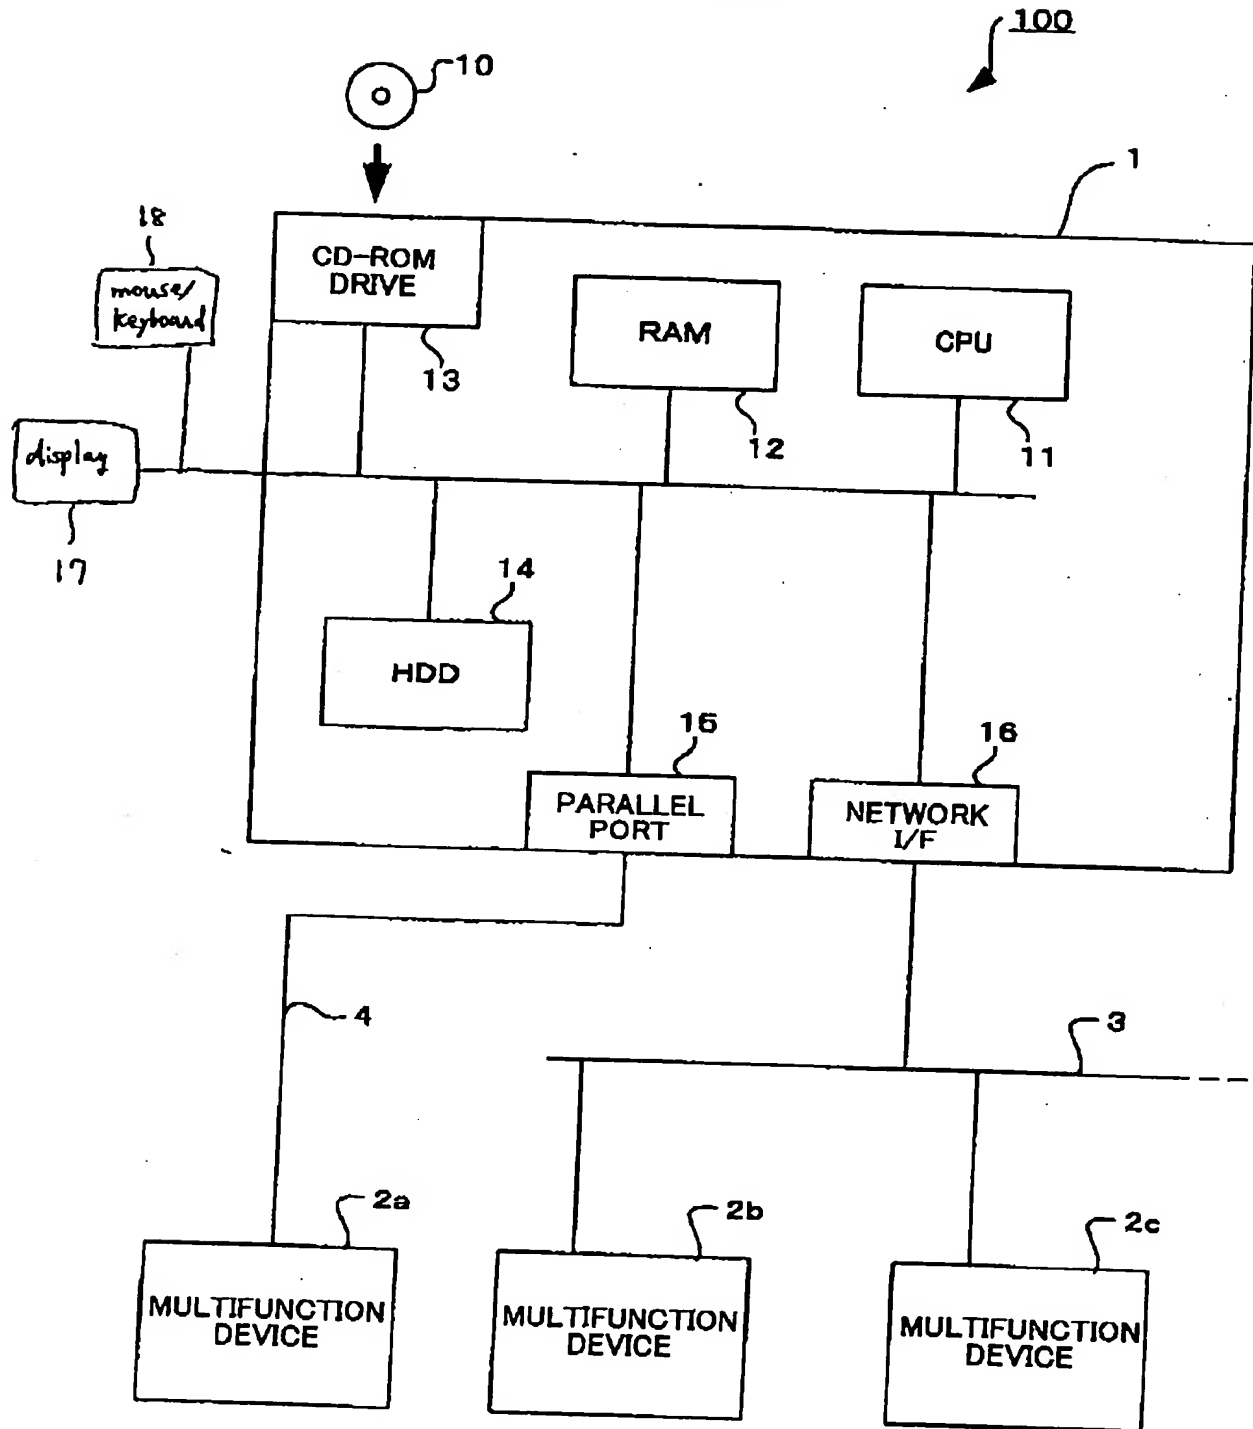

## [INSTALLATION PROCESS]

FIG.4


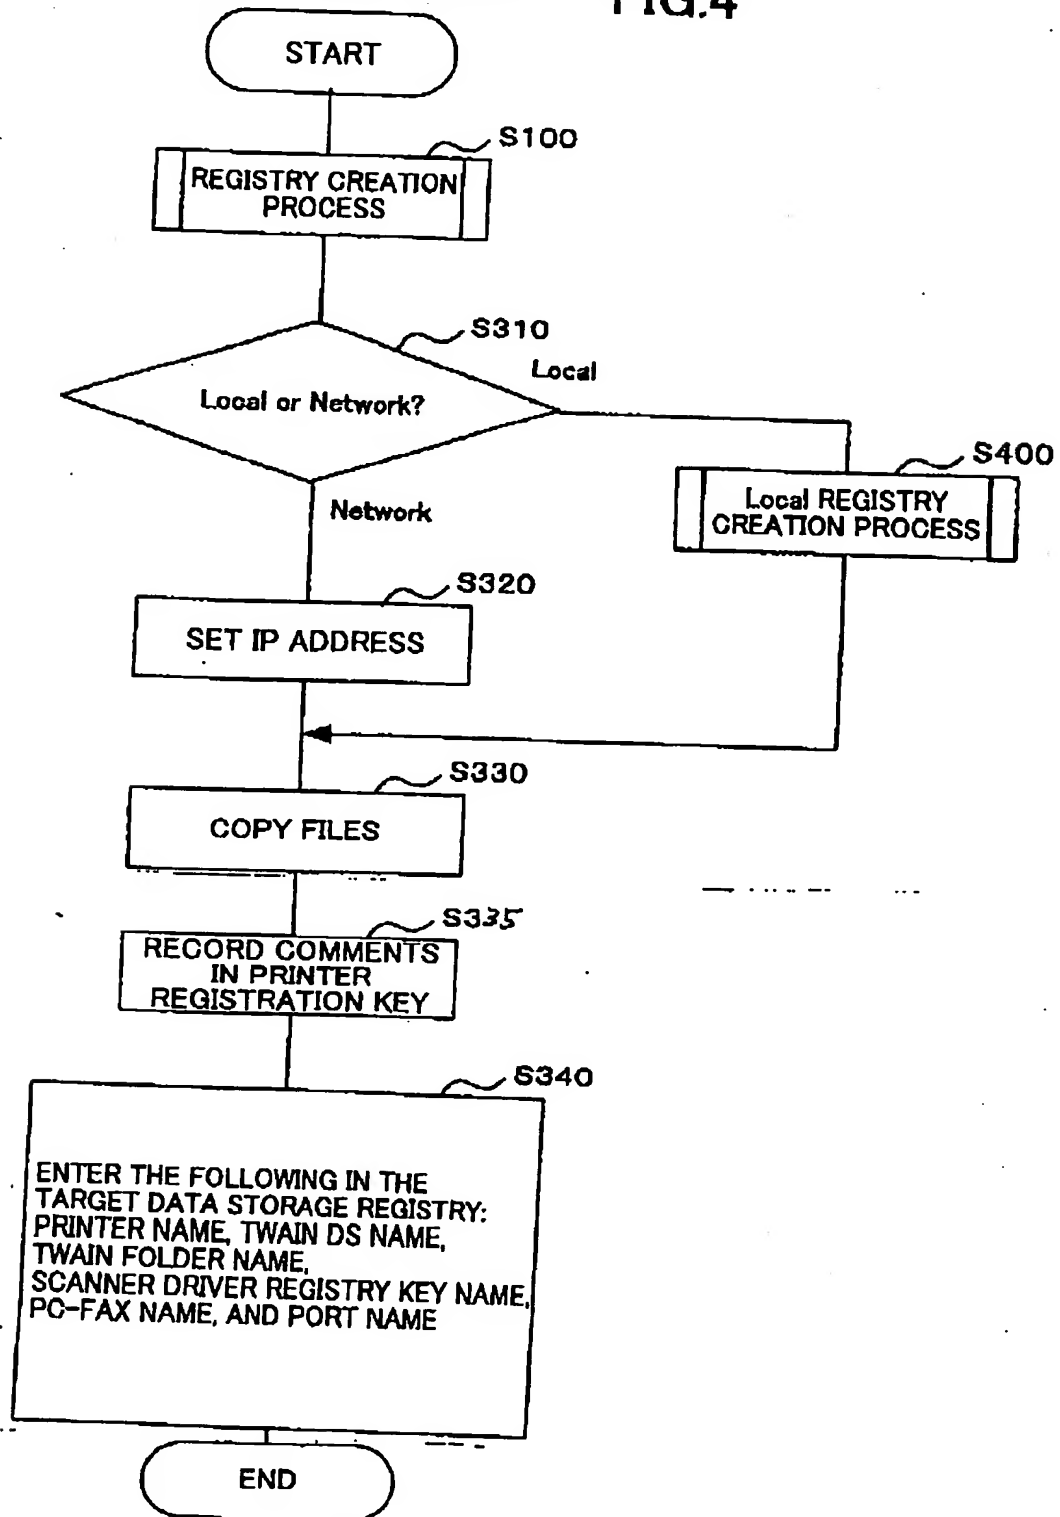


FIG.5

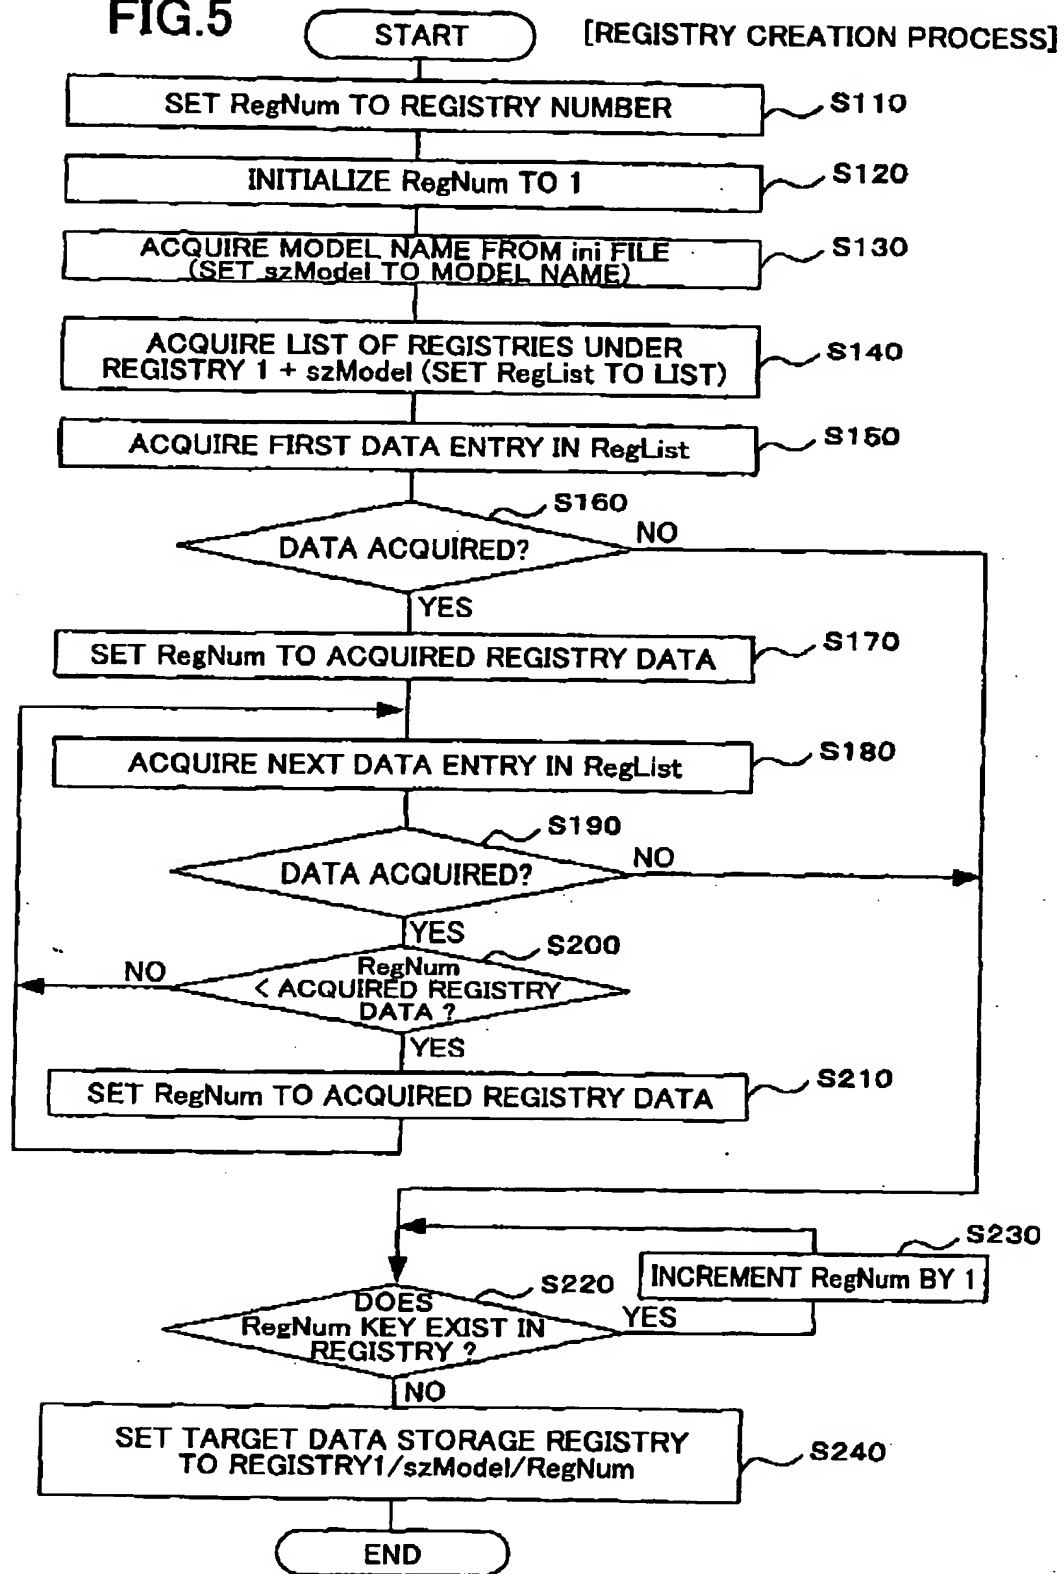

## [Local REGISTRY CREATION PROCESS]

FIG.6

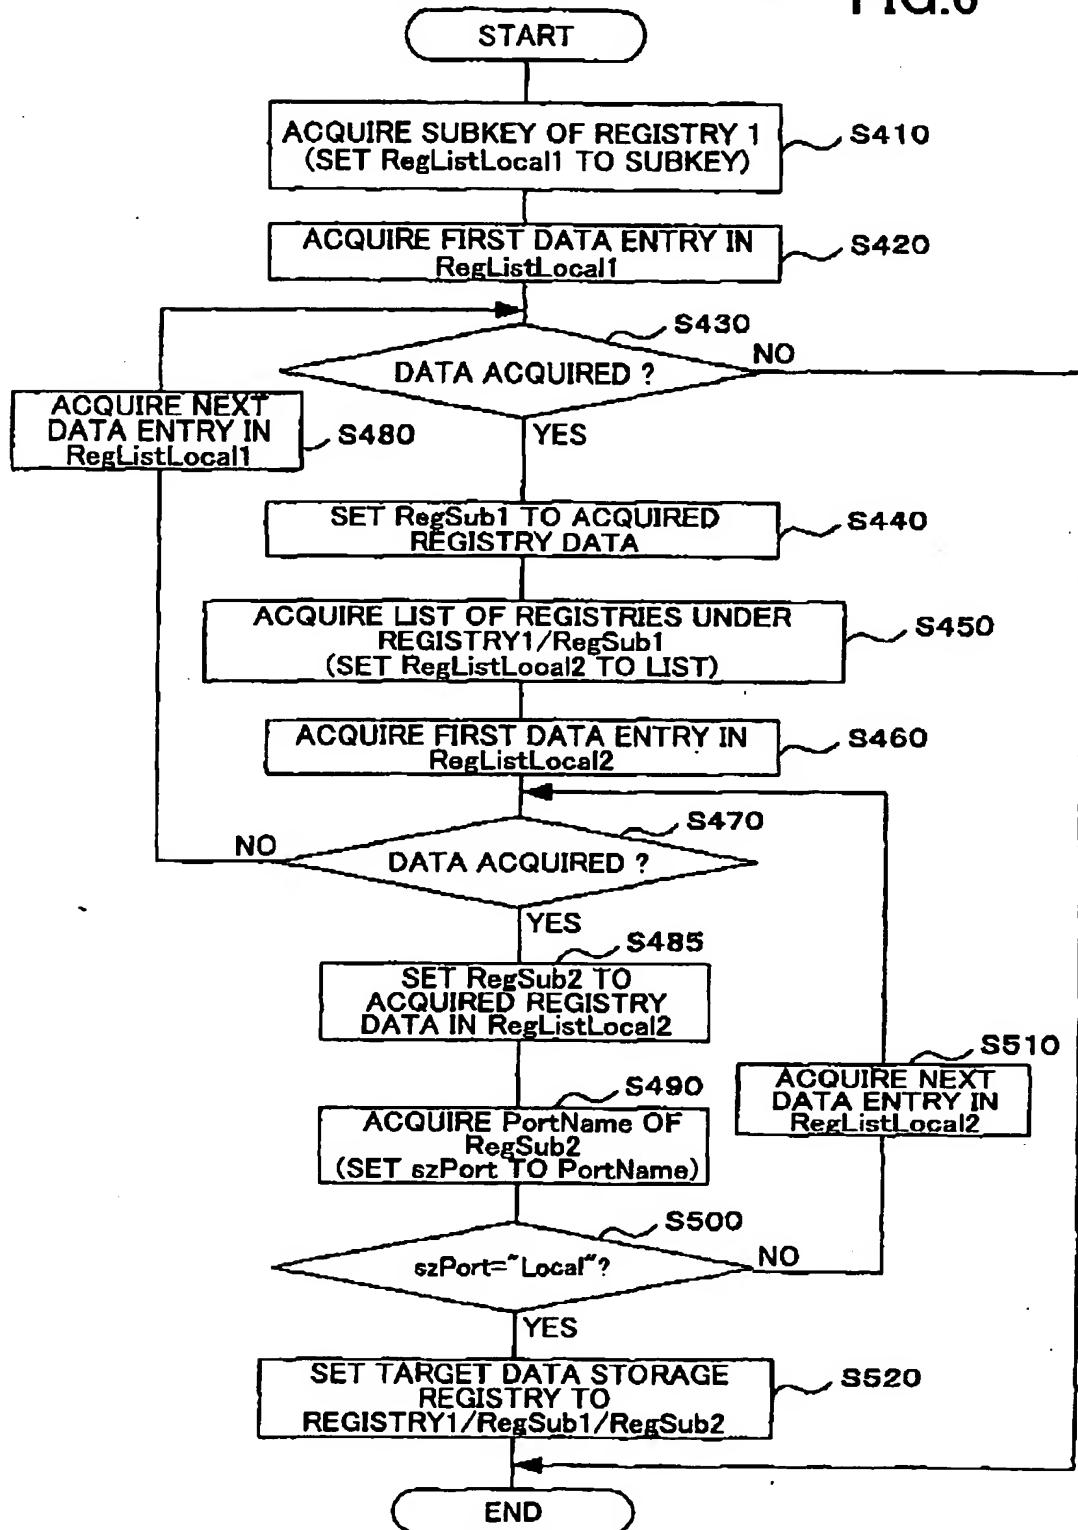


FIG. 7

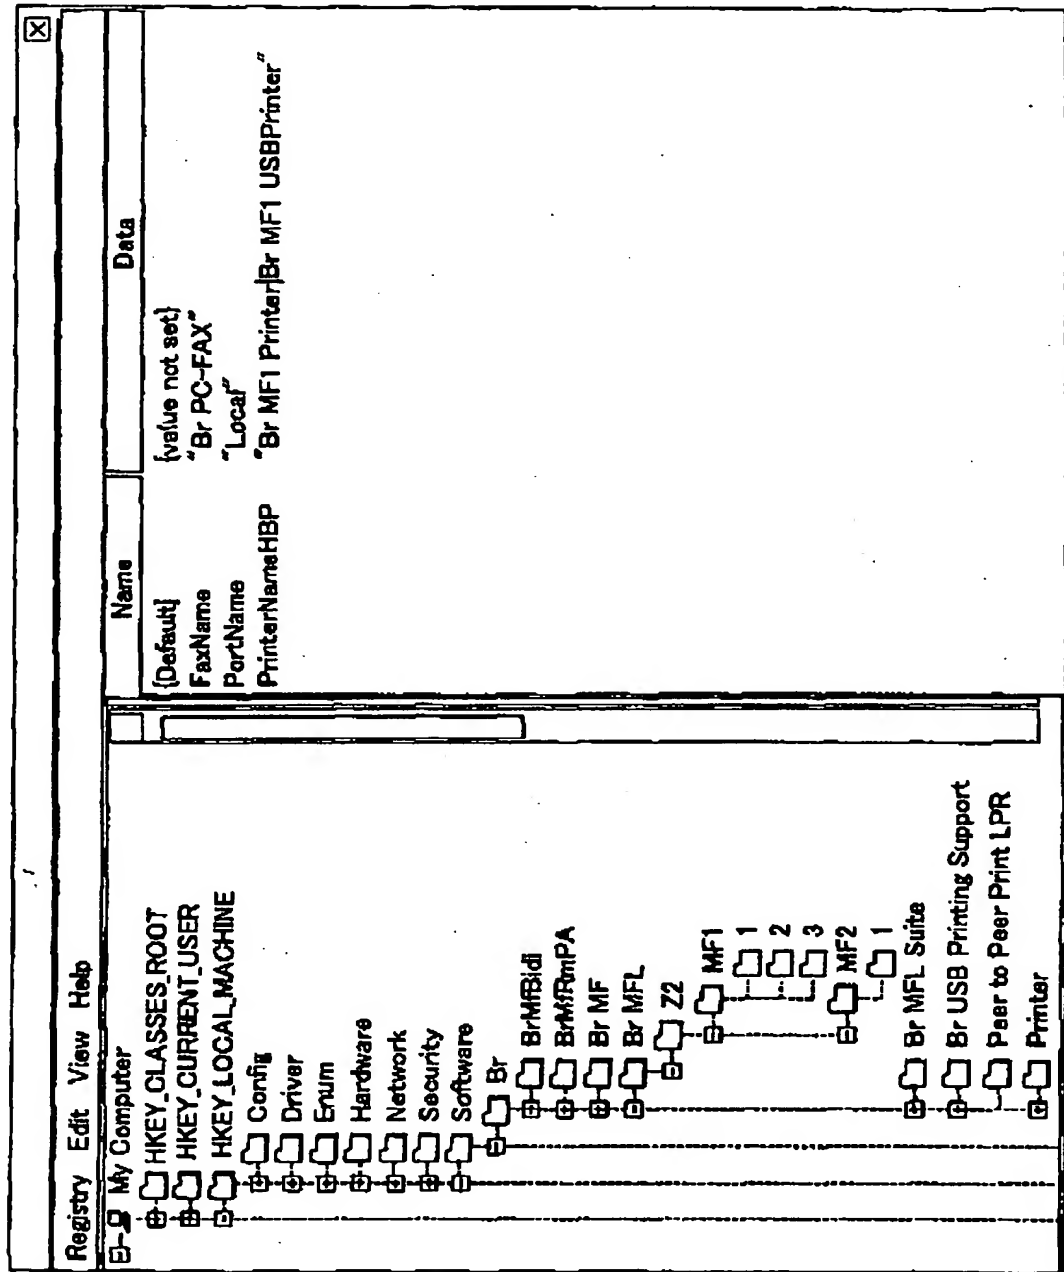


FIG.8

Br MFL Suite Installation X

Choose the devices you want to install

NodeName	IP Address	Model Name
BR_224156	APIPA	MF1
BR_2241A9	11.22.33.44	MF1
BR_2241B7	11.22.33.55	MF2

FIG.9

inf FILE

```

DRIVER TYPE Scan
MODEL NAME Br MF LAN
DRIVER FILE NAMES a.drv b.drv ...
REGISTRY ENTRY DATA A B C

```

```

.
.
.
.

```

```

PROCEDURE DATA

```



FIG.10 (a)

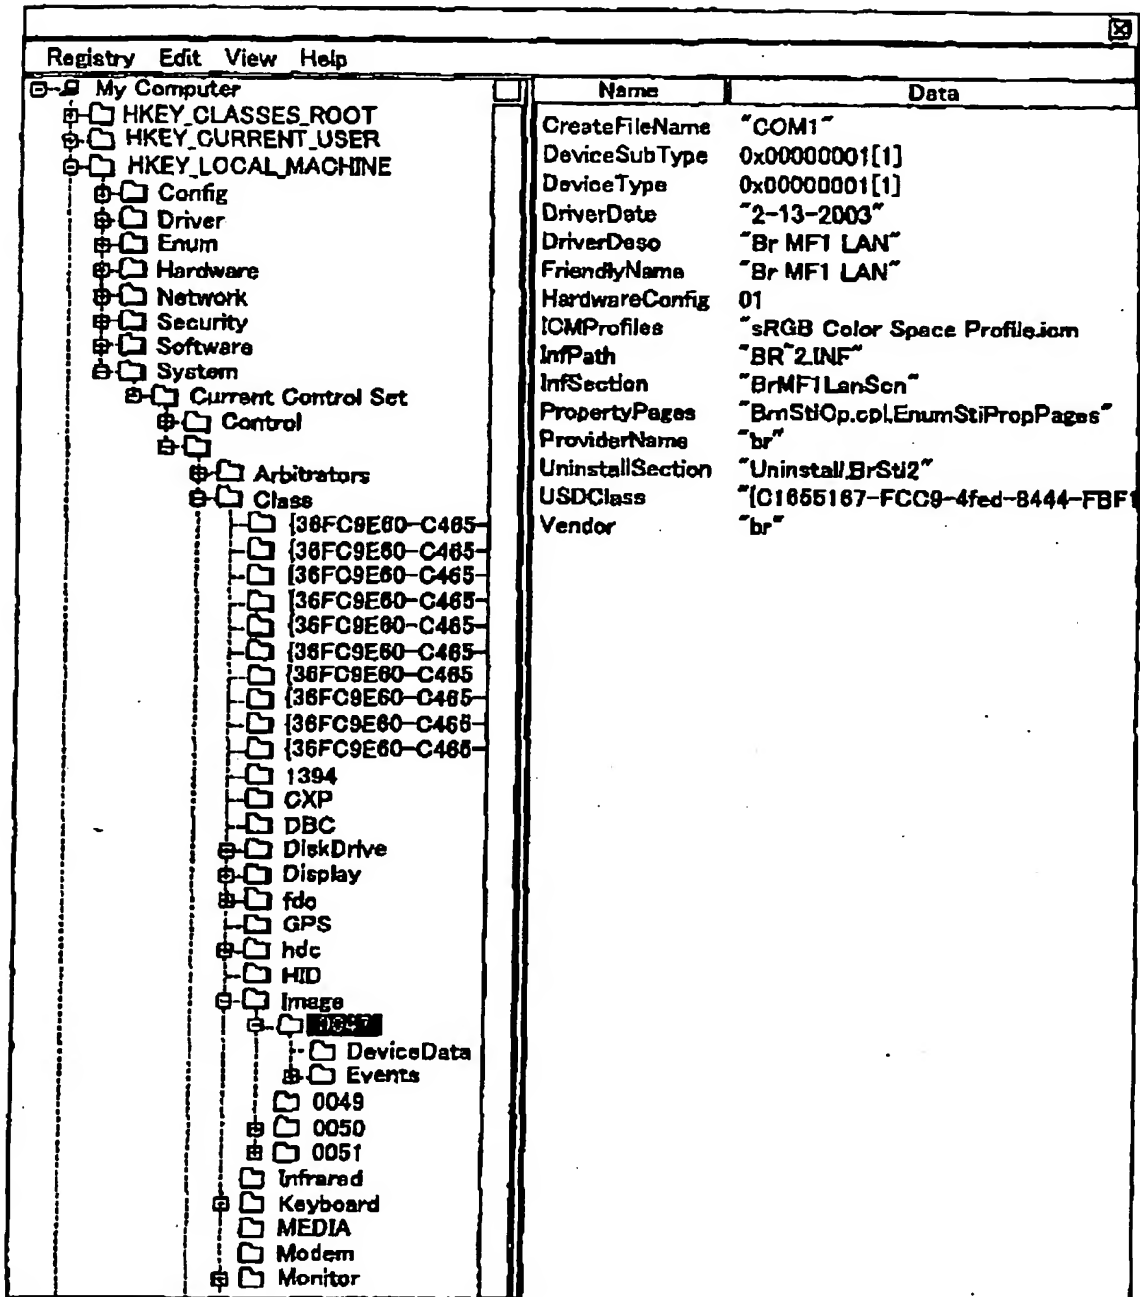


FIG. 10(b)

Registry Edit View Help

Name	Data
Attributes	0x00000240 (576)
ChangeID	0x001e209f (1843359)
Datatype	RAW
Default DevMode	42 00 72 00 6f 00 74 00 66 00 66 00 72 00 20
Default Priority	0x00000000 (0)
Description	
dnsTimeout	0x00003a98 (15000)
DsKeyUpdate	0x00000000 (0)
Location	
Name	Br-MFI Printer
ObjectGUID	
Parameters	
Port	BLP_11.22.33.44_1
Print Processor	BRMFC PRINT
Printer Driver	Br-MFI Printer
Priority	0x00000001 (1)
Security	01 00 04 80 e4 00 00 00 f4 00 00 00 00 00 00
Separator File	
Share Name	
SpoolDirectory	
StartTime	0x00000000 (0)
Status	0x00000180 (384)
Timeout	0x00000afc8 (45000)
UntilTime	0x00000000 (0)

My Computer \HKEY-LOCAL-MACHINE\SYSTEM\CurrentControlSet\Control\Print\Printers\Br-MFI Printer

FIG.11

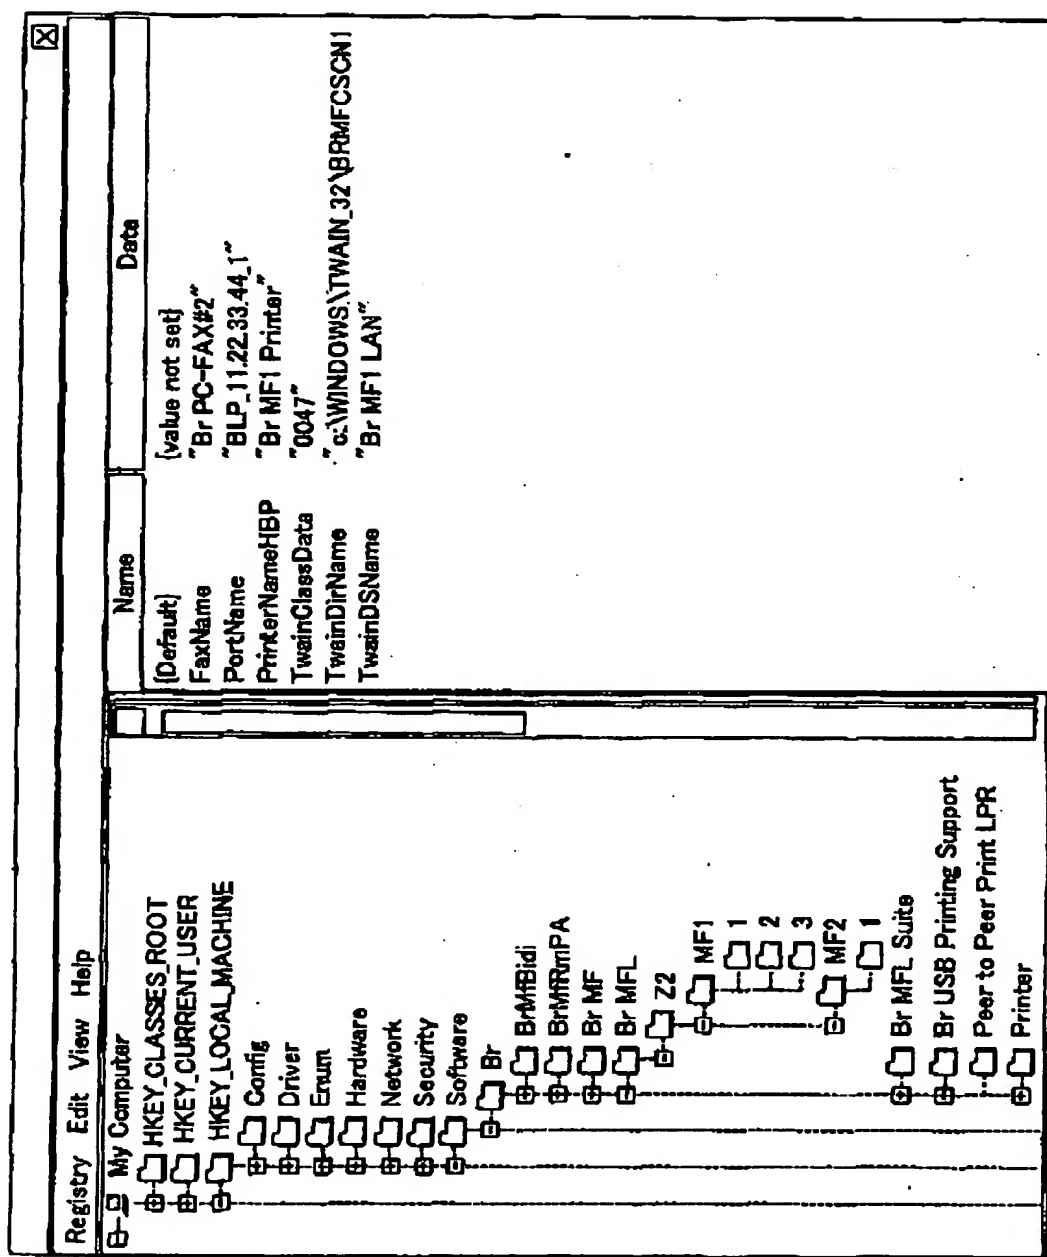


FIG.12

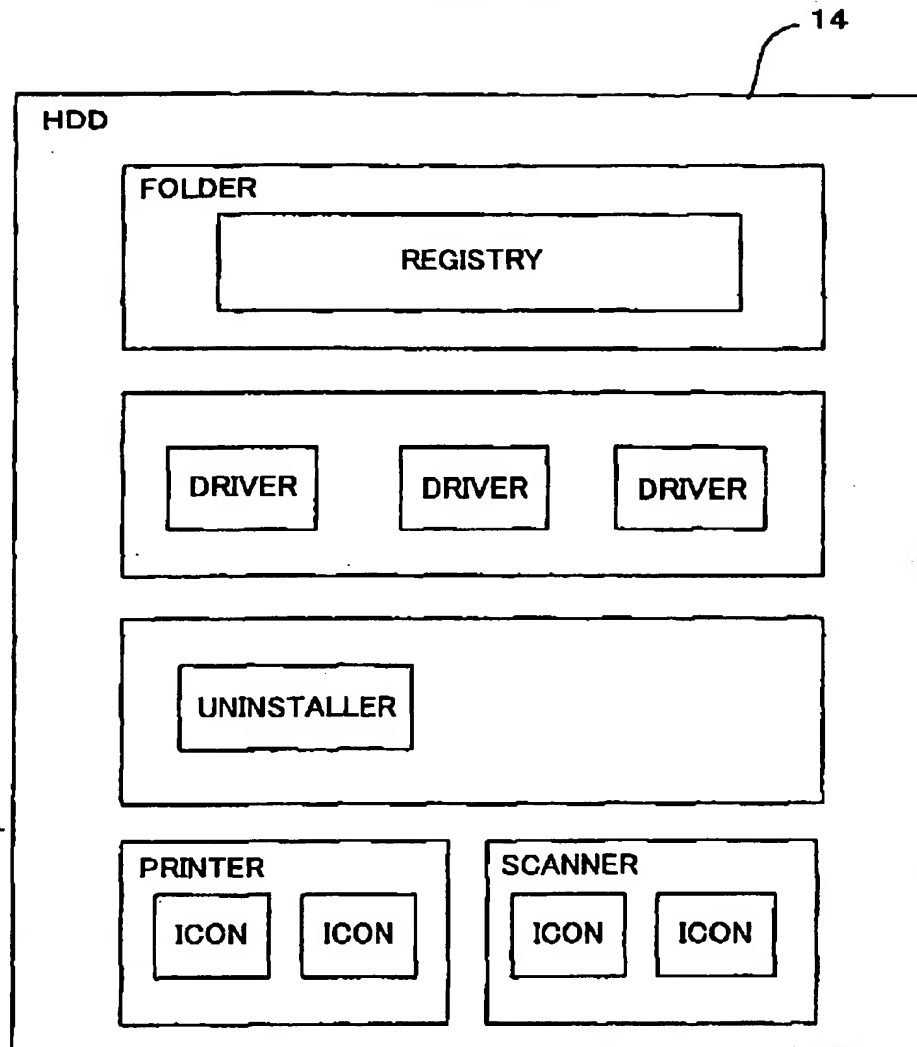


FIG.13

## [UNINSTALLATION PROCESS]

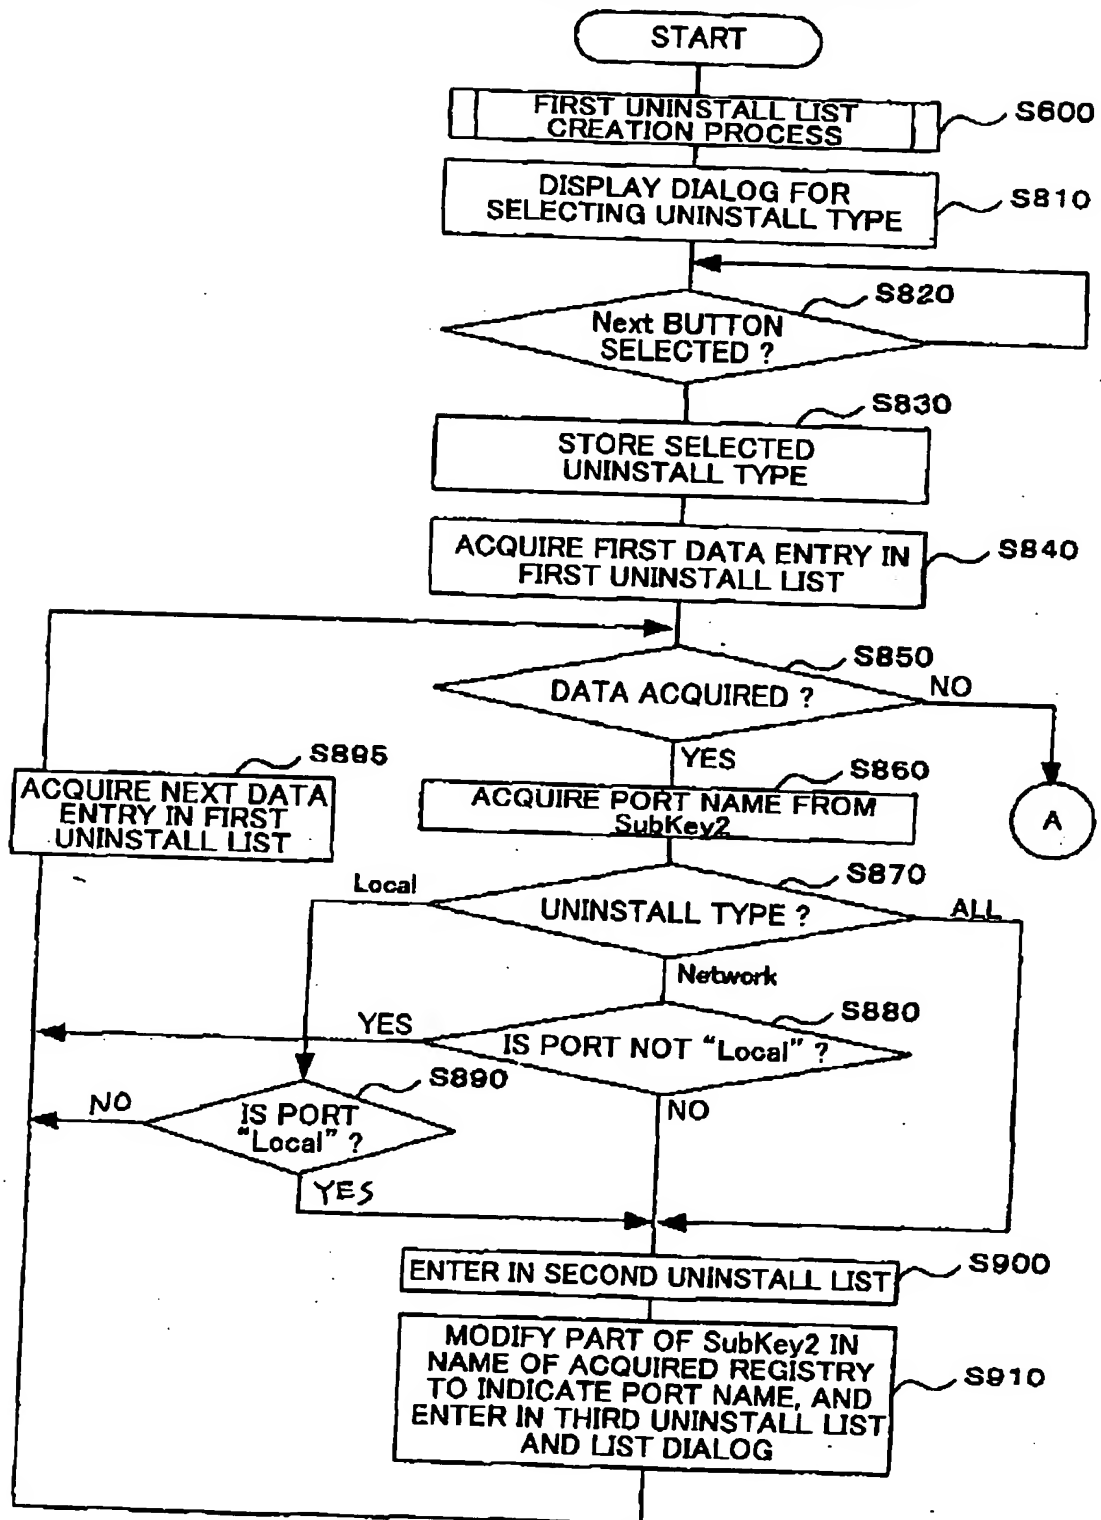


FIG.14


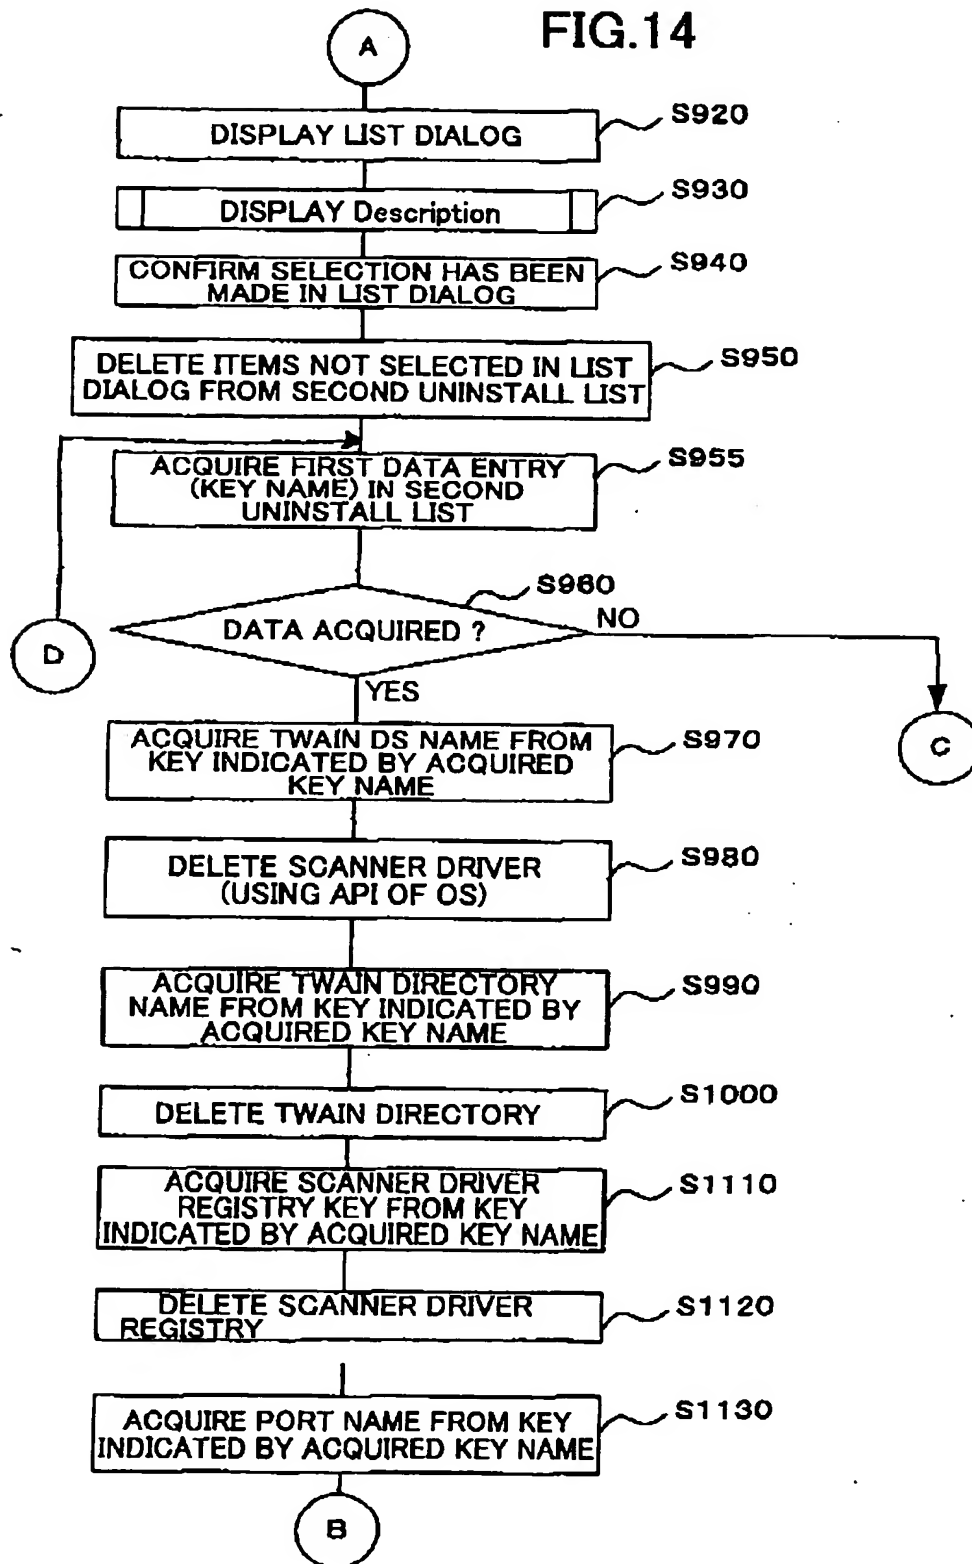


FIG.15

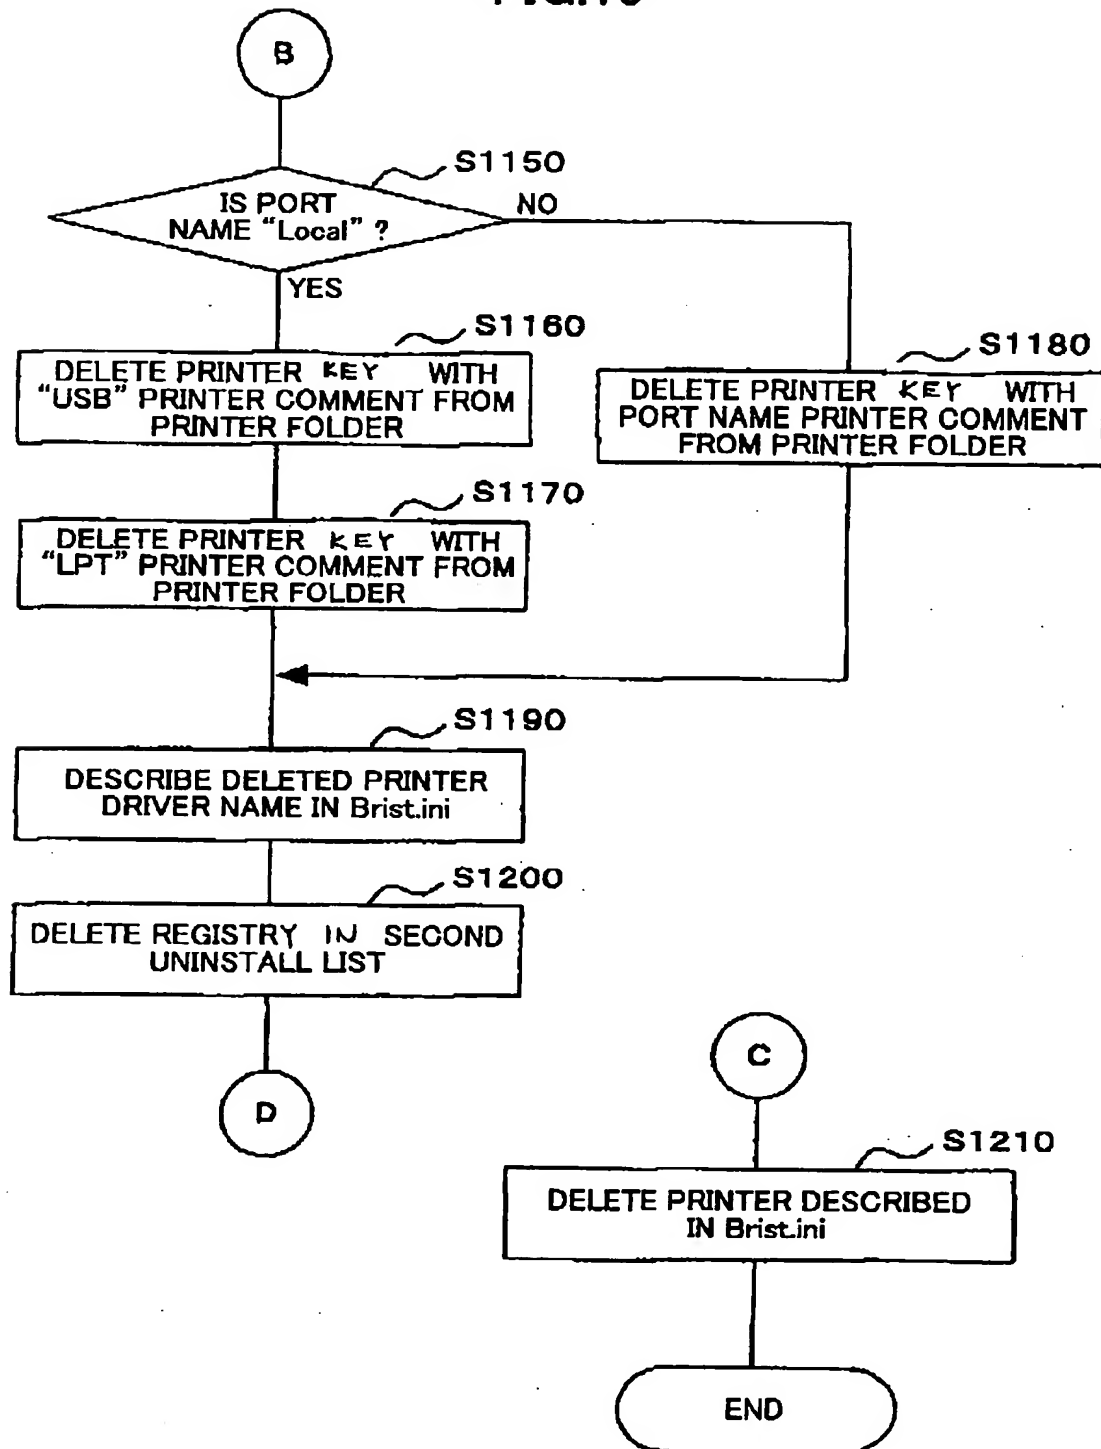

[FIRST UNINSTALL LIST CREATION PROCESS]

FIG.16(a)

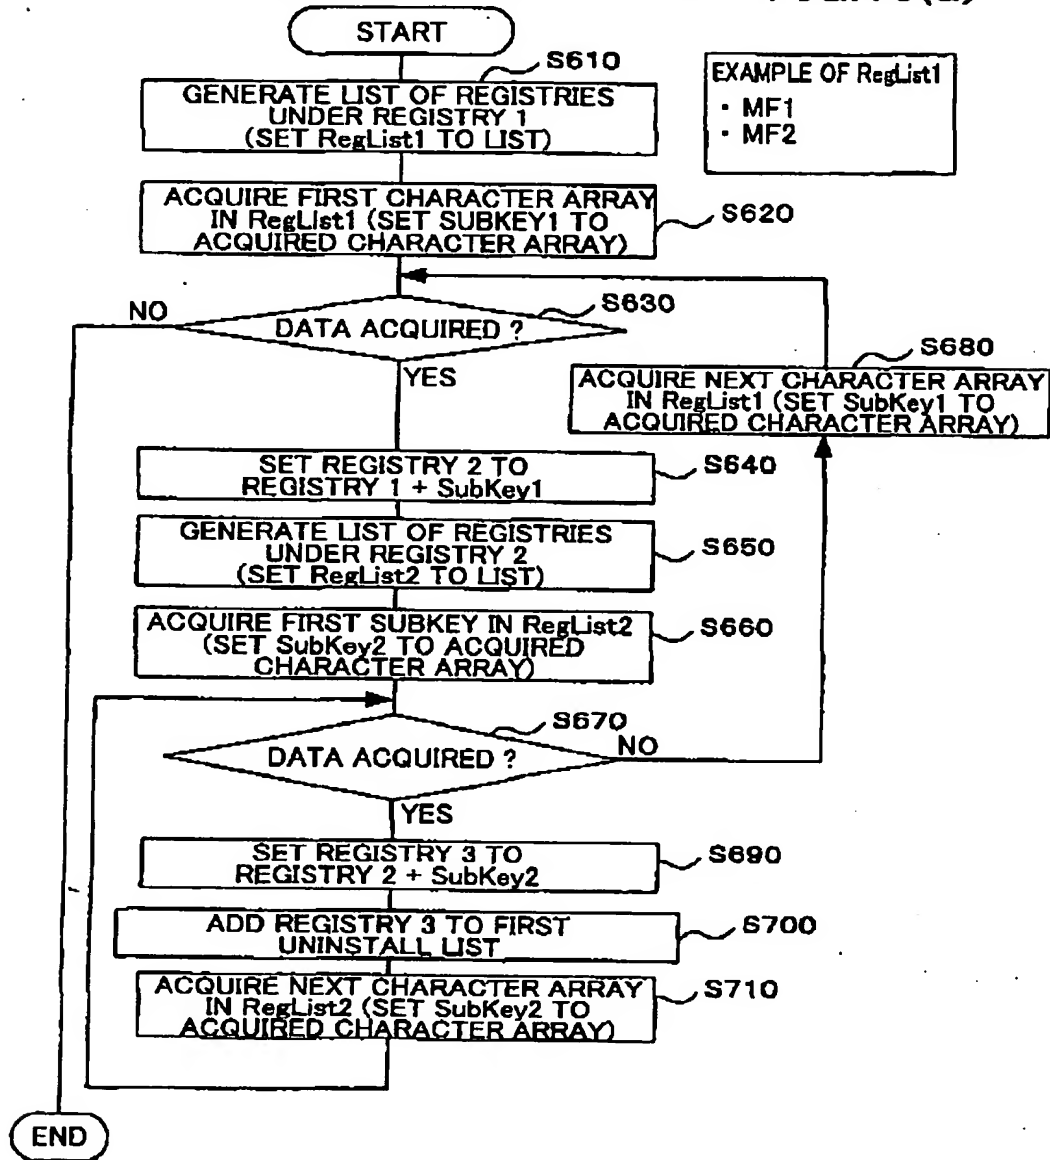


FIG.16(b)

REGISTRY 1  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2

REGISTRY 2  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1

REGISTRY 3  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\1



## FIG.17(a)

### UNINSTALL LIST 1

HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\1  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\2  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\3  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF2\1

## FIG.17(b)

IF USER SELECTS "Local" AS UNINSTALL TYPE AND  
THE ENTRY IN THE UNINSTALL LIST HAVING "Local" IS "2"

### UNINSTALL LIST 2

HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\2

### UNINSTALL LIST 3

HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\Local

## FIG.17(c)

IF "ALL" IS SELECTED AS THE UNINSTALL TYPE

### UNINSTALL LIST 2

HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\1  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\2  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\3  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF2\1

### UNINSTALL LIST 3

HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\Local  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\BLP\_11.22.33.44\_1  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF1\BLP\_11.22.33.45\_1  
HKEY\_LOCAL\_MACHINE\Software\Br\Br MFL\Z2\MF2\BLP\_11.22.33.55\_1

FIG.18

Br MFL Suite

Connection Type

Select the devices you want to uninstall

☒ Local Interface Select if your device is connected to this computer.  
(for example using USB or Parallel cable)

☐ Network Interface Select if your device is connected through a network.

☐ ALL Select "ALL" to uninstall both Interface connections.

< Back Next > Cancel

FIG.19

Br MFL Suite

Select Model

Select the devices you want to uninstall

Description
BLP_11.22.33.44_1
Br MF1 Printer
Br MF1 LAN
Br PC-FAX#2

< Back Next > Cancel

FIG.20

[Description DISPLAY PROCESS]

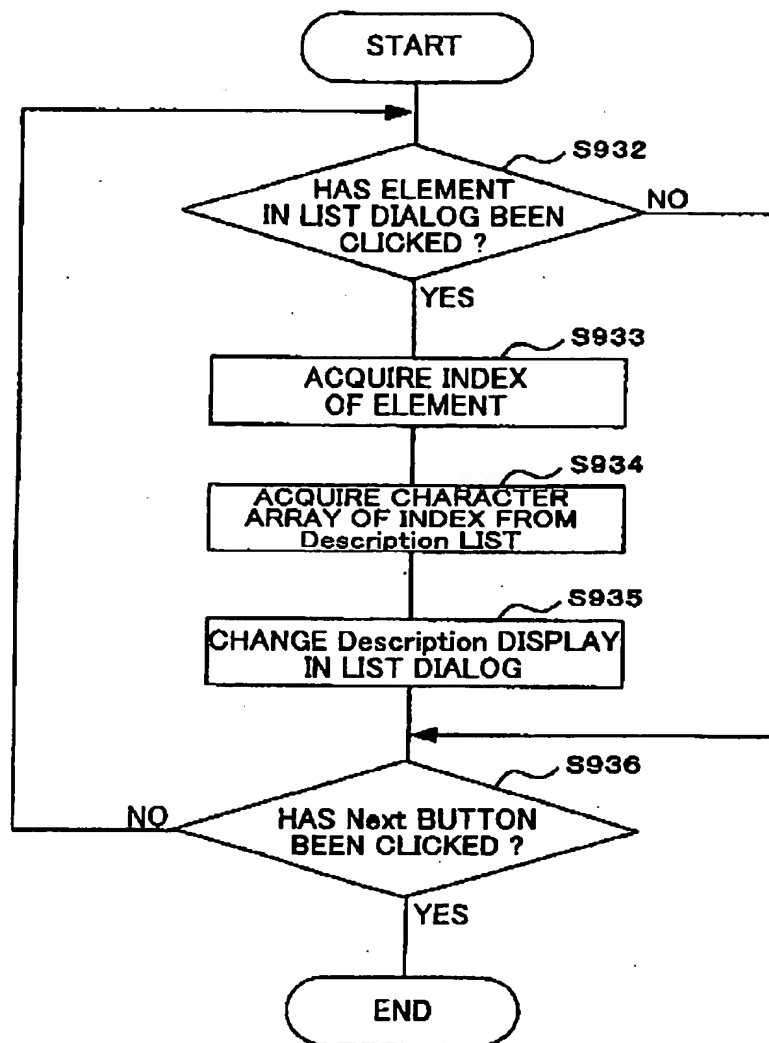


FIG.21

Brlatini

[Printer Driver]  
1=Br MF-8420 Printer  
2=Br PC-FAX